

Refill procedure TODD system

1. During standard operation one of the tanks will be “active” (see white light)
2. The other tank will automatically refill with water up to 3/4 full
At **3/4 full** the **Blue light** will start to blink to request both powders A&B
3. Open the valve at the bottom of the funnel of that tank, and pour both powders **A & B** into the tank.
4. After filling the tank with powders, close the valve on the funnel bottom, after closing the valve, push the **Blue** blinking light to confirm the powder refill.
5. After 3 hours the water valve will automatically fill the tank up to “**full**” and the Tank is ready to be used.
6. The automatic valve will “change tanks” if the active tank is empty, after switching to the “ready to be used” tank.
7. The water valve will start to refill the “not active” tank (step 2)

ALARMS

The **Yellow light** will be on, if powder refill is requested by the **Blue blinking light**.

The **Red light** will be on, if there is no available product ready to use